


INSTALLATION MANUAL: ELECTRONIC FUEL INJECTION SYSTEM: YAMAHA FZ-1

HPI – Kuilenstraat 97, 3960 Bree, Belgium
 TEL: (0032) 089-46 74 39 | FAX: (0032) 089-47 33 28 | GSM: (0032) 0495-53 90 21
 Email: hpi@hpi.be | Website: www.hpi.be


Disconnect the connector from the airpressure sensor. (img. 1)
 Place the 2 connectors from the CDI-unit between these 2 connectors
 (the connector from the airpressure sensor and the connector from
 the disconnected cable) as an overpass.

There is some room next to the battery for the CDI-unit itself. (img. 2)

The image on the right shows the factory settings
 for the potentiometers.

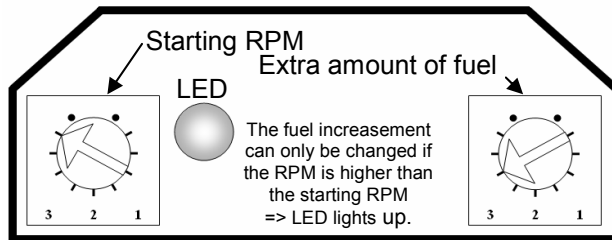

img.1

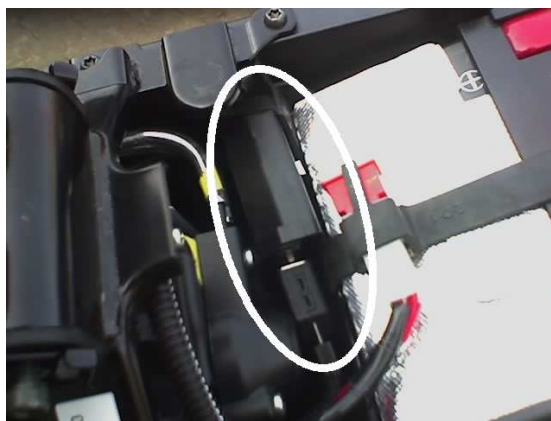

img. 2


INSTALLATION MANUAL: ELECTRONIC FUEL INJECTION SYSTEM: YAMAHA FZ-1

HPI – Kuilenstraat 97, 3960 Bree, Belgium
 TEL: (0032) 089-46 74 39 | FAX: (0032) 089-47 33 28 | GSM: (0032) 0495-53 90 21
 Email: hpi@hpi.be | Website: www.hpi.be


Disconnect the connector from the airpressure sensor. (img. 1)
 Place the 2 connectors from the CDI-unit between these 2 connectors
 (the connector from the airpressure sensor and the connector from
 the disconnected cable) as an overpass.

There is some room next to the battery for the CDI-unit itself. (img. 2)

The image on the right shows the factory settings
 for the potentiometers.

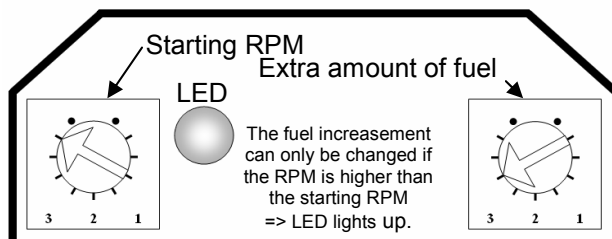

img.1

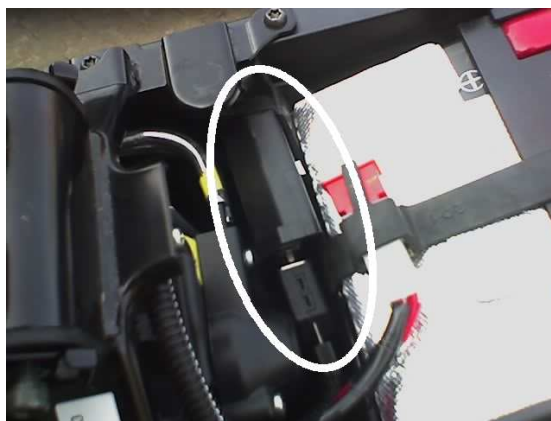

img. 2