



# INSTALLATION MANUAL: PEUGEOT SPEEDFIGHT CHIPKEY

HPI – Kuilenstraat 97, 3960 Bree, Belgium  
TEL: (0032) 089-46 74 39 | FAX: (0032) 089-47 33 28 | GSM: (0032) 0495-53 90 21  
Email: hpi@hpi.be | Website: www.hpi.be

## Information:

- these CDIs **bypass** the original immobiliser system (Chipkey system), so **no new key is needed**
- they are direct replacements for the OEM CDIs.
- a **very cheap** and reliable solution
- easy to install

## Different types:

Replacement CDI code	Original CDI code	Fits
CD10002	AEC400	Elyceo 50/100cc, Speedfight I, Trekker
CD10003	ACI100.01	Elyceo 50/100cc, Speedfight II, Trekker, Vivacity
CD10004D	ACI100.02	Elyceo 125/150cc (4 stroke)
CD10005D	-	Gilera Runner RST 125/200cc (4 stroke)

### Installation CD10002 (image 4):

- Place the by-pass between the 3 pole connectors. (see image 3)
- Separate the two black/red cables from the scooter, and connect these like a by-pass to the two black/red cables from the HPI CDI-unit. (see image 3)
- Connect the black cable (with ring) to the –pole of the battery (mass).
- Pull the 2 connectors out of the CDI-unit of the scooter.
- The orange cable has to be connected to the HT-coil. This connection can be found on one of these two connectors. Look at **image 1** to pinpoint the correct position.



image 1

### Installation CD10003 / CD10004D / CD10005D (image 2):

Simply replace the OEM CDI with our CDI, that's it!

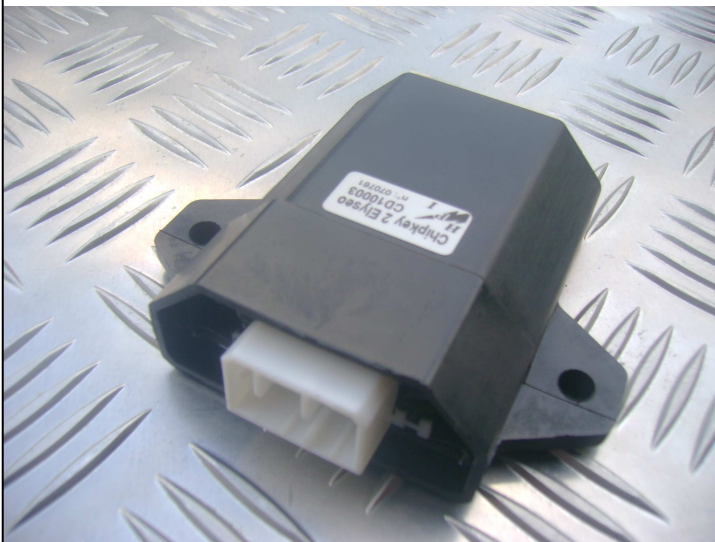


image 2



image 3

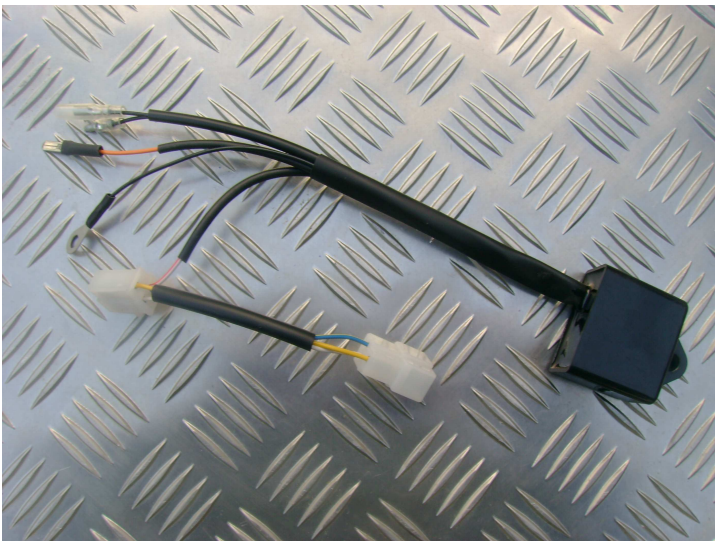


image 4